


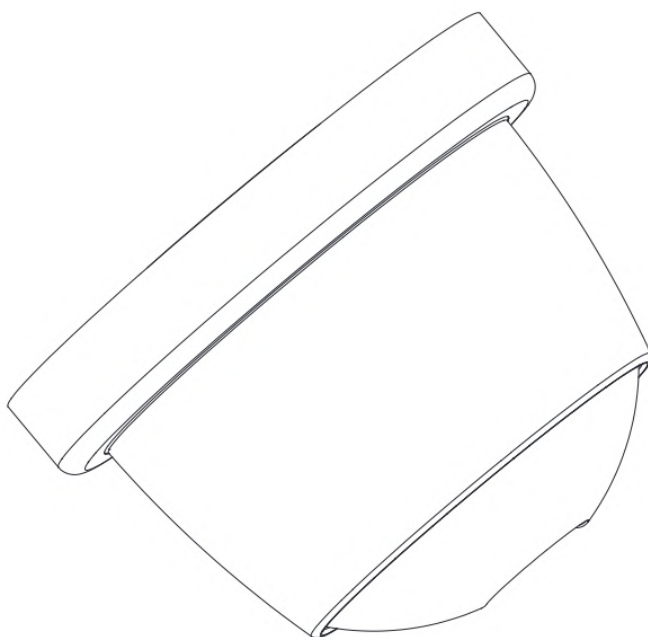

LUCCI AIR CEILING FAN ANGLE CANOPY

- **INSTALLATION**
- **OPERATION**
- **MAINTENANCE**

CAUTION
**READ INSTRUCTIONS CAREFULLY FOR SAFE
INSTALLATION AND FAN OPERATION.**

NOTE: This instruction manual is the installation directions for the ceiling fan angle canopy only.
The ceiling fan is sold separately. Refer to the instruction manual included with the ceiling fan for installation directions.

To ensure correct function and safety, please read and follow all instructions carefully before assembly, installation and use of this product. Please keep instructions for future reference.

SAFETY PRECAUTIONS

1. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. An all-pole disconnection switch must be incorporated into the fixed wiring, in accordance with local wiring rules.

WARNING:

**FOR SAFE USE OF THIS FAN AN ALL-POLE DISCONNECTION
MUST BE INCORPORATED INTO THE FIXED WIRING IN
ACCORDANCE WITH THE WIRING RULES.**

As outline in clause 7.12.2 of AS/NZS 60335-1 for meeting the minimum electrical safety of this standard.

Please note warranty will be void if installation is without a means for an all-pole disconnection incorporated in the fixed wiring in accordance with the wiring rules.

Example: If a fan is connected to a circuit that can be isolated via an all-pole safety switch at the switchboard, then this is considered to be an all-pole disconnection to the ceiling fan electrical circuit, meeting the requirements of clause 7.12.2 of AS/NZS 60335.1.


A single-pole switch on the active of the receiver input of remote

control must also be included in the wiring, and located the same room as the ceiling fan.

4. The fan should be mounted so that the blades are more than 2.1 m above the floor.
5. This ceiling fan angle canopy is suitable for indoor and alfresco areas where the fan which is also indoor and alfresco is fully undercover with a minimum of 2 walls. This fan is not waterproof. When installed in an alfresco area, the ceiling fan must be positioned in a location protected from water, wind, dust and salt. Exposure to these elements will void the warranty. Mounting the fan in a situation where it is subject to water or moisture is dangerous and may increase the risk of damage, injury or electrical shock.
6. Must be assembled and installed by a licensed electrician.
7. **WARNING:** If unusual wobbling or oscillating movement is observed, immediately stop using the ceiling fan and contact the manufacturer, its service agent or suitably qualified persons.
8. The replacement of parts of the safety suspension system device shall be performed by the manufacturer, its service agent or suitably qualified persons.
9. The fixing means for attachment to the ceiling such as hooks or other devices shall be fixed with a sufficient strength to withstand 4 times the weight of the ceiling fan; that the mounting of the suspension system shall be performed by the manufacturer, its service agent or suitably qualified persons.

PARTS LIST

- Unpack your ceiling fan angle canopy carefully. Remove all parts and hardware.
- Lay out all the components on a smooth, non-scratch surface and make sure there are no components missing before assembling. If parts are missing, return the complete product to the place of purchase for inspection or replacement.
- Check whether the ceiling fan angle canopy has been damaged during transport. Do not operate/install any product that appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.
- Examine all parts, you should have the following:

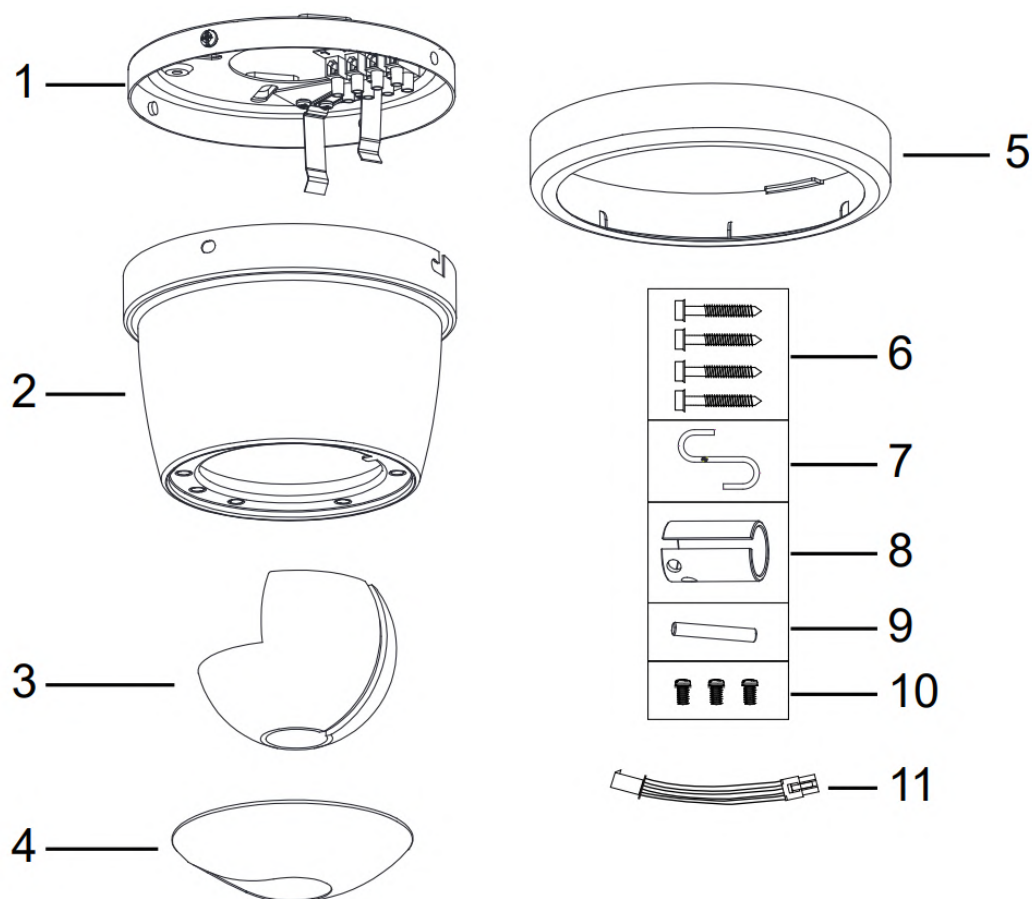**Fig. 1**

1	Mounting bracket x 1	6	Mounting bracket screws x 4
2	Canopy x 1	7	S-hook x 1
3	Hanger ball x 1	8	Sleeve x 1
4	Canopy cover x 1	9	Dowel pin x 1
5	Decorative ring x 1	10	Screws x 3
11	Cable x 1		

INSTALLING THE CEILING FAN ANGLE CANOPY

NOTE: Before installing this ceiling fan angle canopy, please check the installation site and requirements and ensure that the conditions as shown in the following figure are met. (Fig.2)

Select the appropriate extension down rod (not included, sold separately) to assemble this ceiling fan angle canopy and your fan.

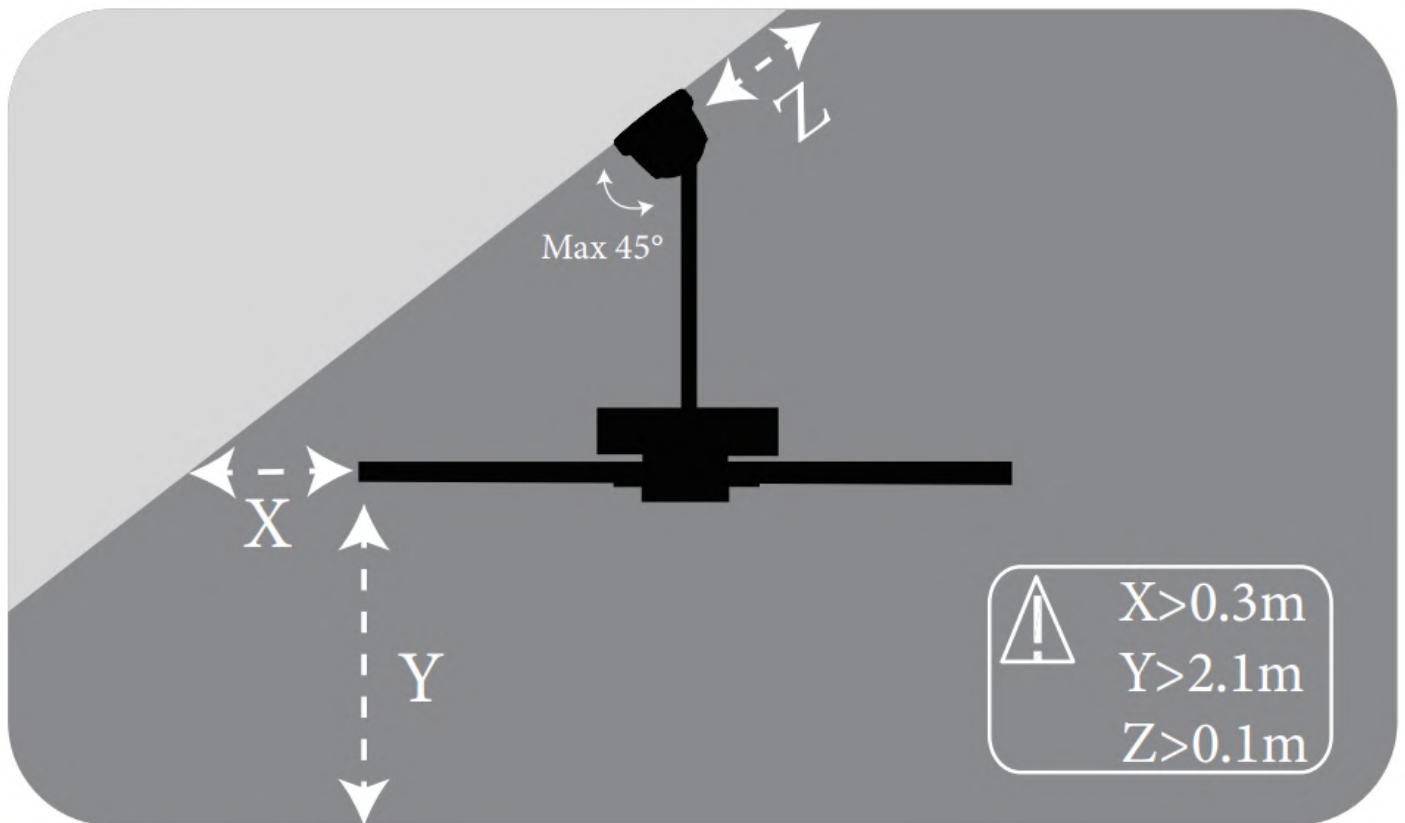


Fig. 2

- This fan hanging system supports a maximum **45-degree** angled ceiling installation. (Fig.2)
- The ceiling fan must be installed in a location so that the blades are spaced 300mm from the tip of the blade to the nearest objects or walls. (Fig.2)
- The fan should be mounted so that the blades are more than 2.1m above the floor. (Fig.2)
- This ceiling fan angle canopy must be installed in a location so that the canopy is spaced at least 10mm from the edge of the canopy to the flat ceiling. (Fig.2)

INSTALLING THE MOUNTING BRACKET

- Install the mounting bracket to the sloped ceiling joist or structure that is capable of carrying a load of at least 4 times the weight of your fan, with 4 long screws provided. Ensure at least 30mm of the screw is threaded into the support. (Fig.3)

NOTE: Take note that when installing this mounting bracket, the screw and terminal block on the mounting bracket should face the top. (Fig.3)

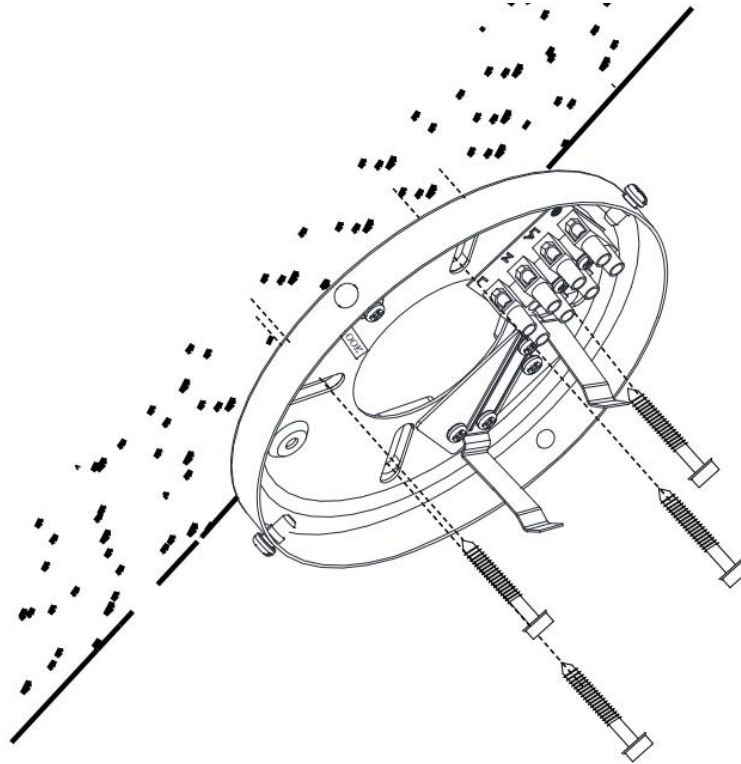


Fig. 3

NOTE: The bracket screws provided are for use with wooden structures only. For structures other than wood, the appropriate screw type **MUST** be used. Ensure the screws used are suitable for the mounting surface and the surrounding environment.

INSTALLING THE ANGLE CANOPY ONTO THE EXTENSION DOWN ROD OF THE FAN

If the diameter of your fan's down rod is 26.5 mm, the installation steps are as follows: (Fig.4)

- Insert the decorative ring, canopy cover & canopy over the extension down rod
- Remove the screw from the hanger ball, then install the hanger ball and dowel pin onto the extension down rod and secure by tightening the two screws.

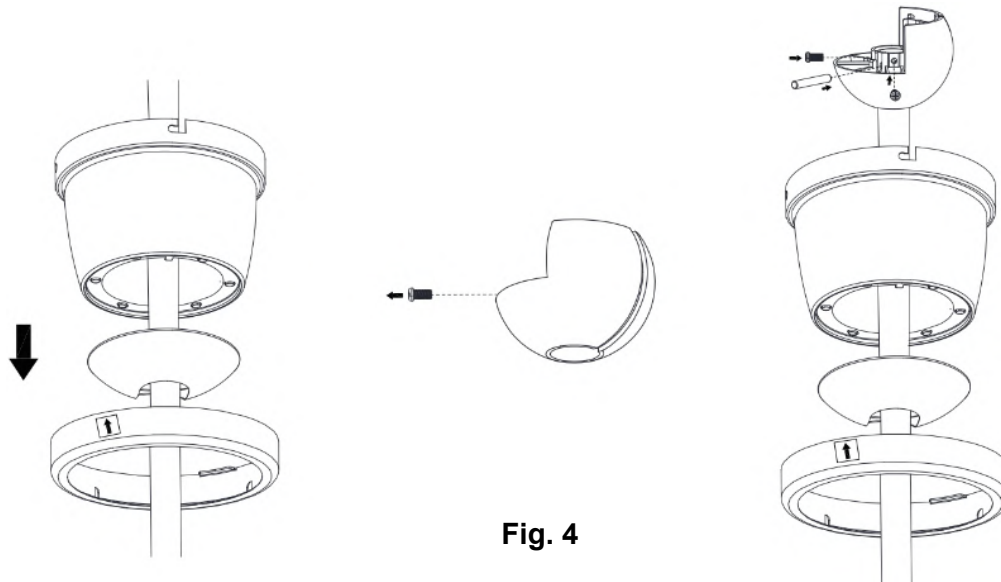


Fig. 4

If the diameter of your fan's down rod is 21 mm, the installation steps are as follows: (Fig.5)

- Insert the decorative ring, canopy cover & canopy over the extension down rod
- Remove the screw from the hanger ball.
- Insert the sleeve onto the top of the extension down rod, then install the hanger and dowel pin onto the extension down rod with the sleeve and secure by tightening the two screws.

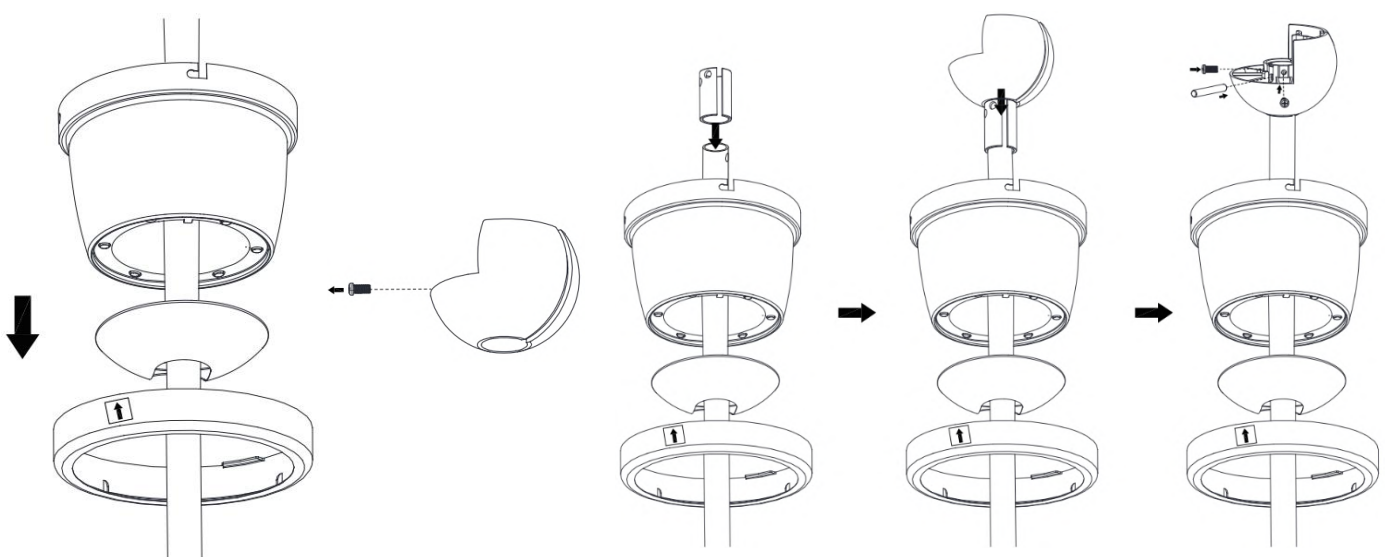


Fig. 5

HANGING THE FAN ASSEMBLY ONTO THE MOUNTING BRACKET

Lift the fan assembly up to the mounting bracket. Hang the fan assembly onto the mounting bracket by the S-hook. (Fig.6)

Ensure the key slot (B) of the hanger ball is positioned on the key pin (A) of the angle canopy to prevent the fan from rotating when in operation. (Fig.6)

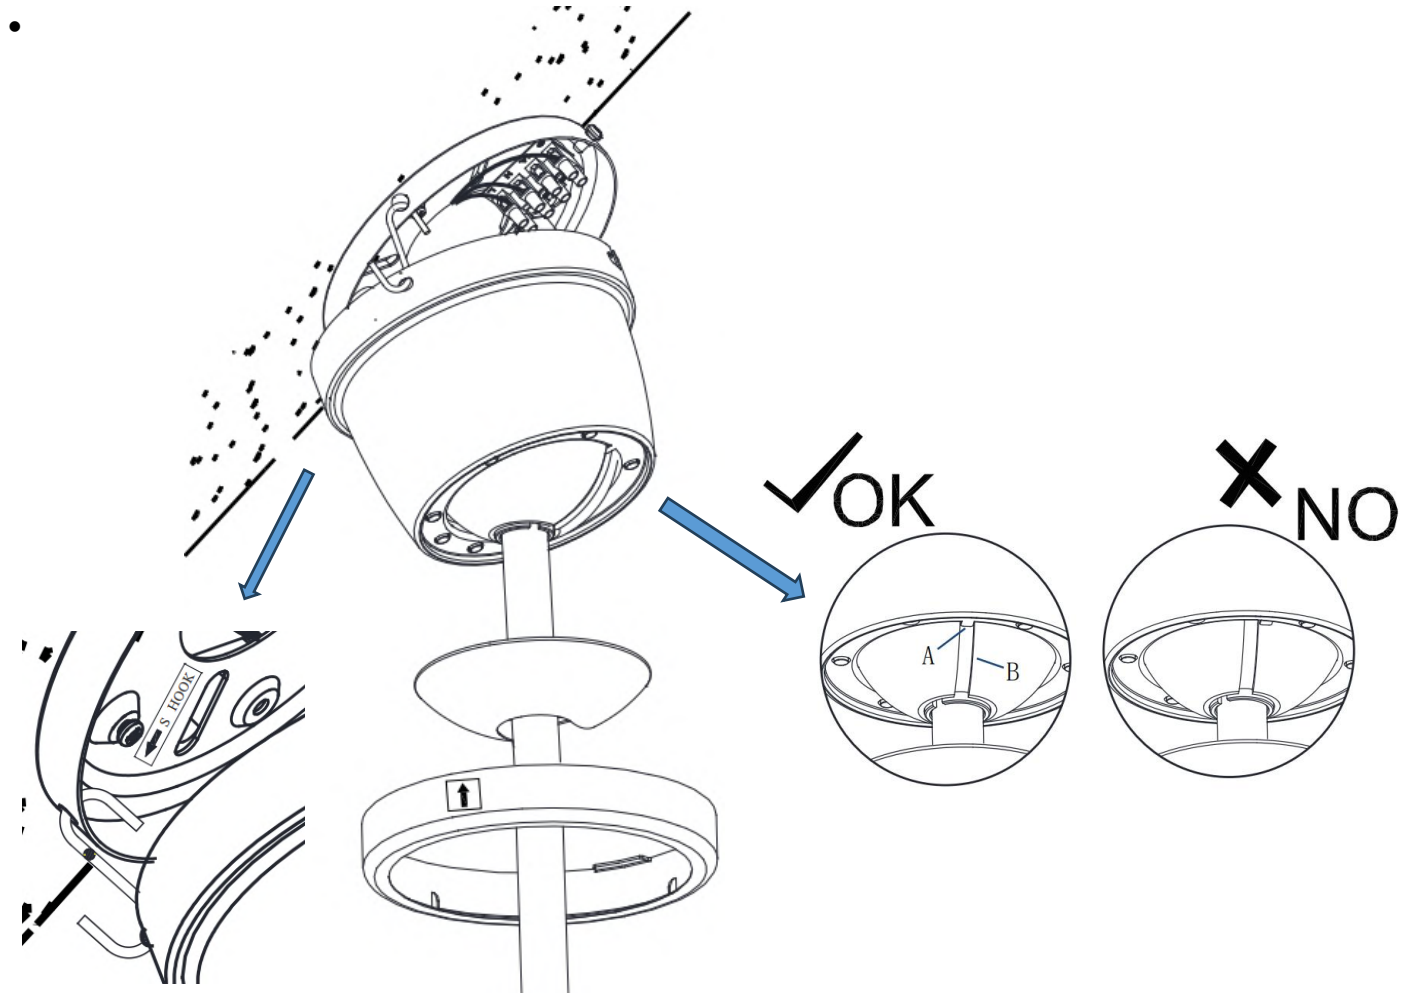


Fig. 6

ELECTRICAL WIRING DIAGRAM THE FAN



PREPARE AND COMPLETE THE ELECTRICAL WIRING --- WIRING DIAGRAM

WARNING: FOR YOUR SAFETY ALL ELECTRICAL CONNECTIONS MUST BE UNDERTAKEN BY A LICENSED ELECTRICIAN.

NOTE: AN ADDITIONAL ALL POLE DISCONNECTION SWITCH MUST BE INCLUDED IN THE FIXED WIRING.


Ensure the motor earth wire is connected to the earth wire from the mounting bracket earthing in the diagram below.

- **If your fan is with wall control, the wiring diagram is as follows: Wiring diagram 1 & 2** (Fig.7 & Fig.8)

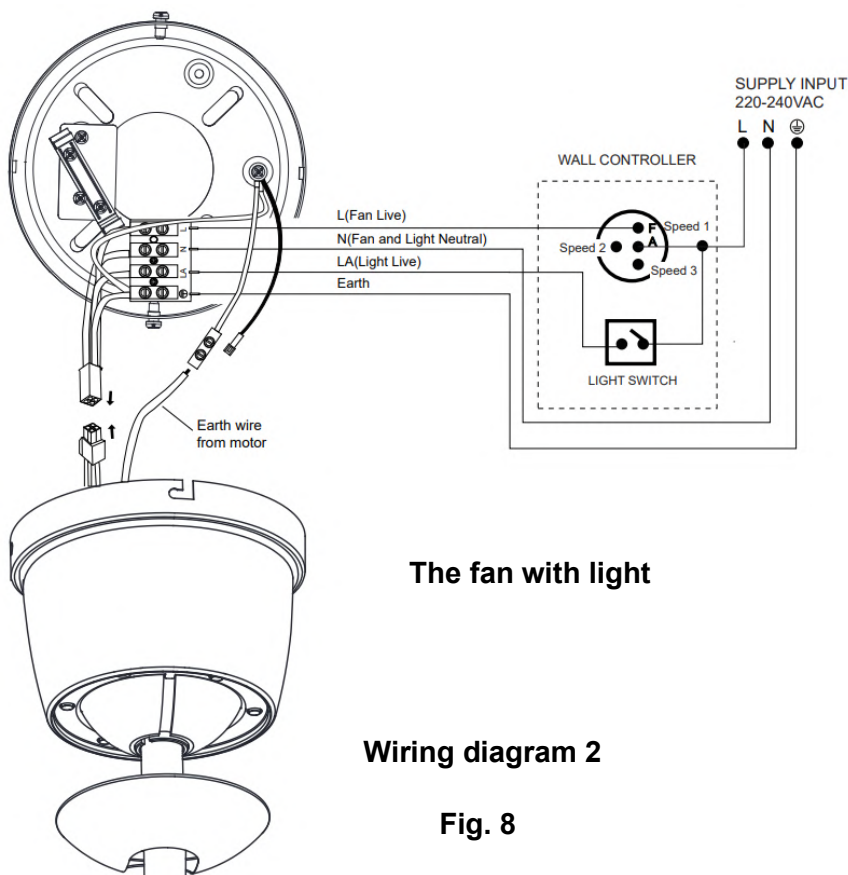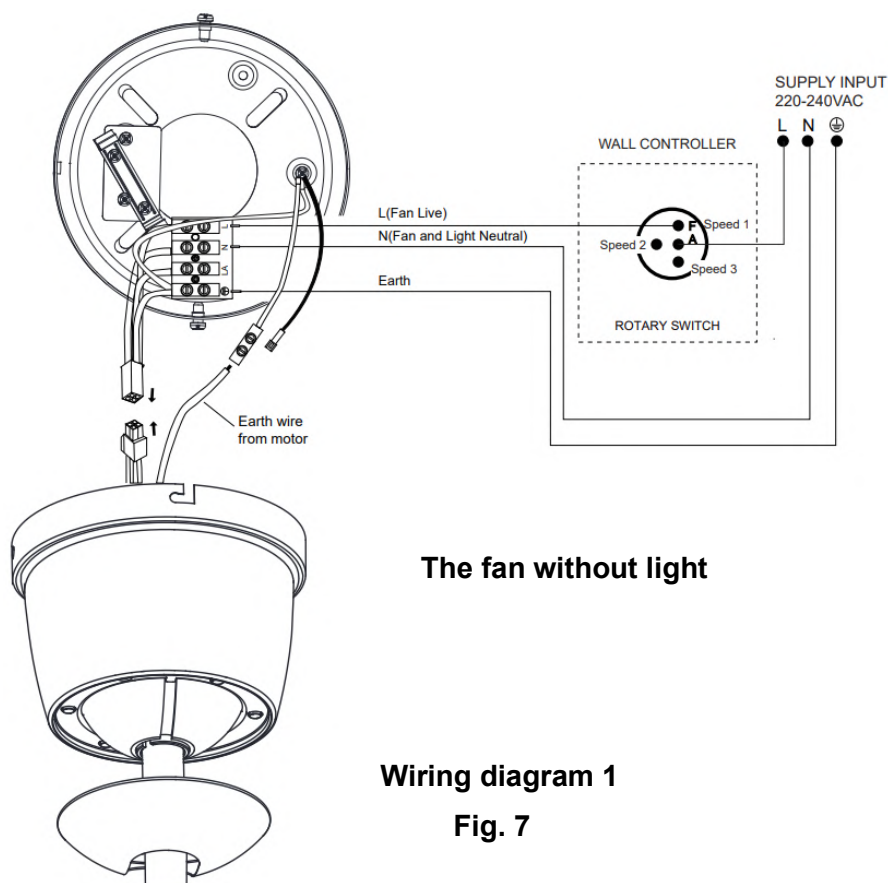


If your fan comes with a remote, select the corresponding wiring diagram below according to the receiver of your fan. The wiring diagrams are as follows:

- **Wiring diagram 3 & 4** (Fig.9 & Fig.10)

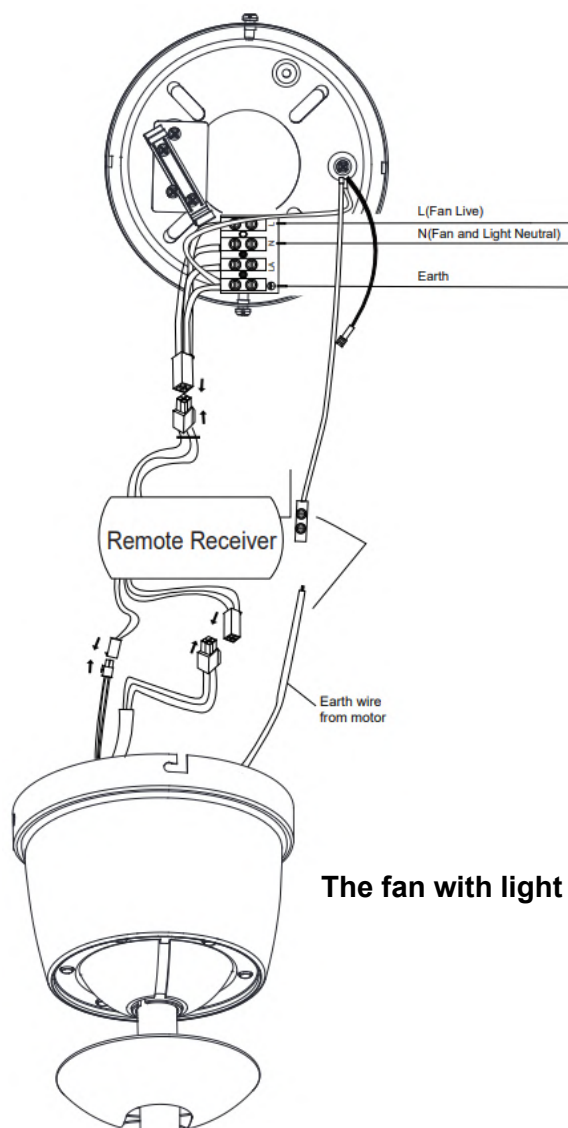

Wiring diagram 3


Fig. 9

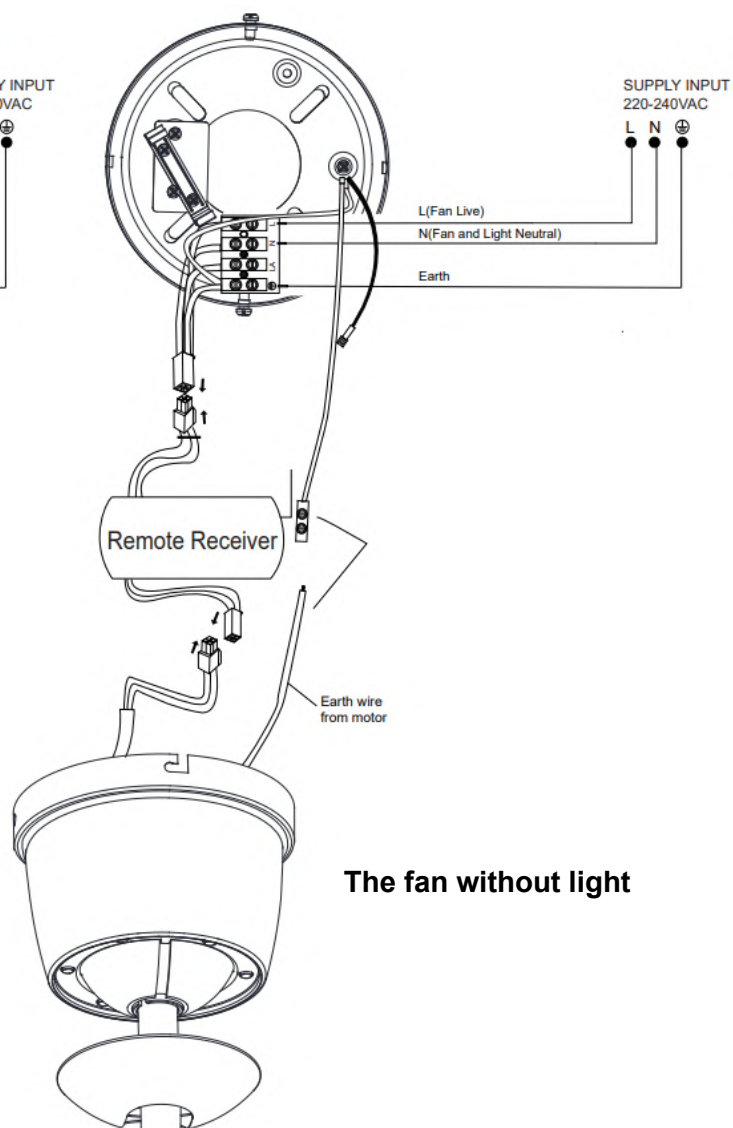

Wiring diagram 4


Fig. 10

• **Wiring diagram 5 & 6** (Fig.11 & Fig.12)

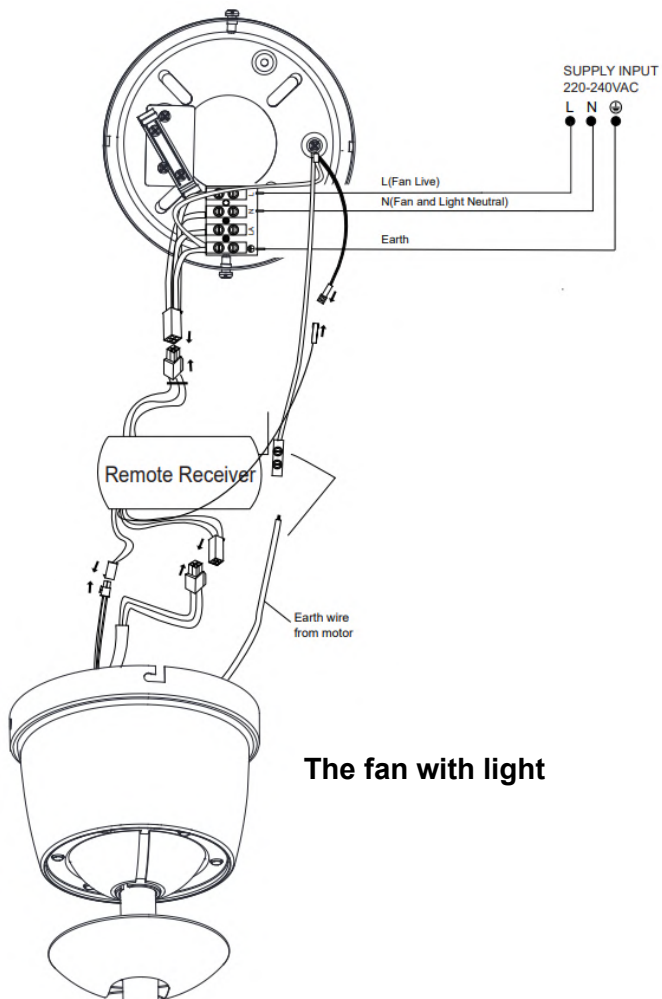

Wiring diagram 5


Fig. 11

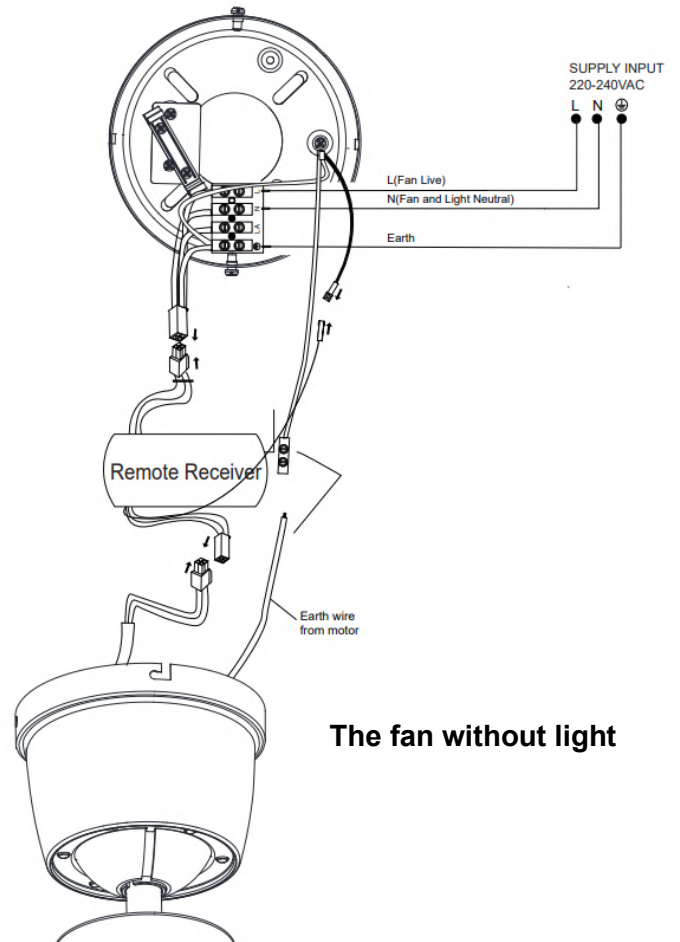

Wiring diagram 6


Fig. 12

• **Wiring diagram 7 & 8** (Fig.13 & Fig.14)

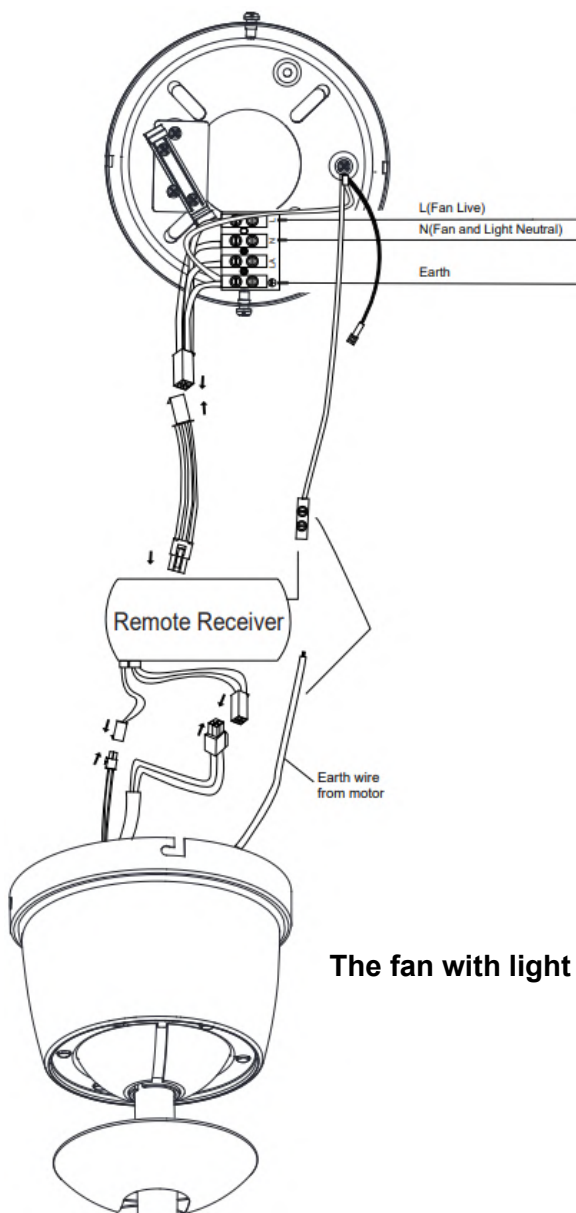

Wiring diagram 7


Fig. 13

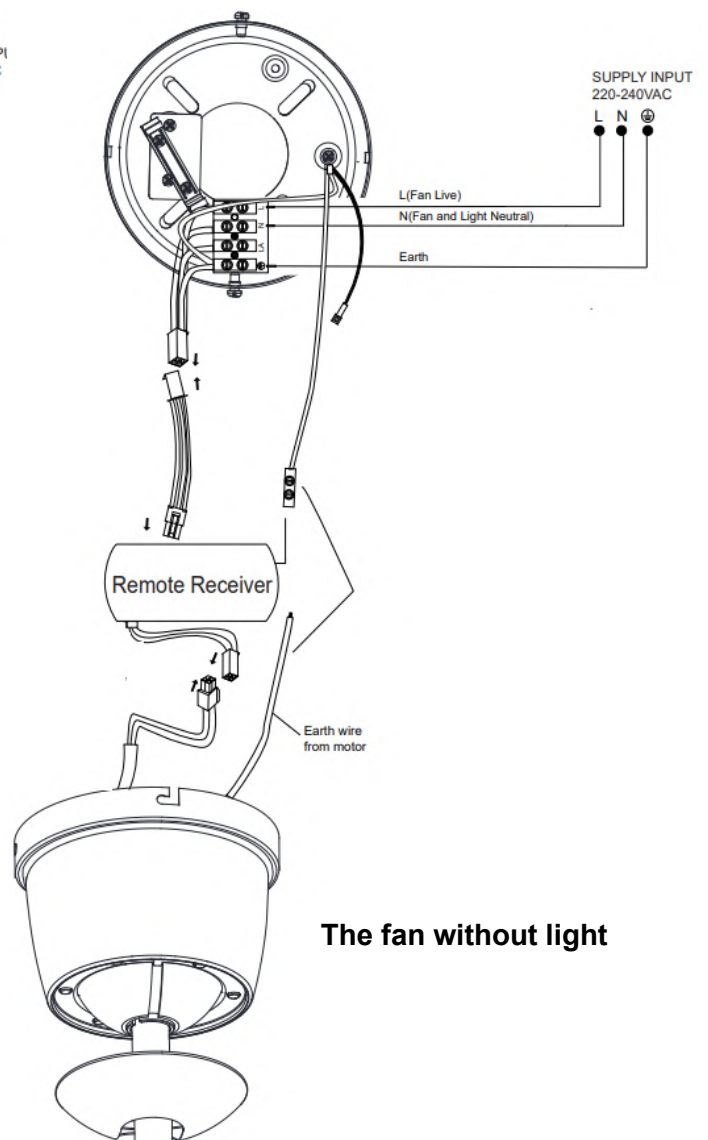

Wiring diagram 8

Fig. 14

- **Wiring diagram 9** (Fig.15)

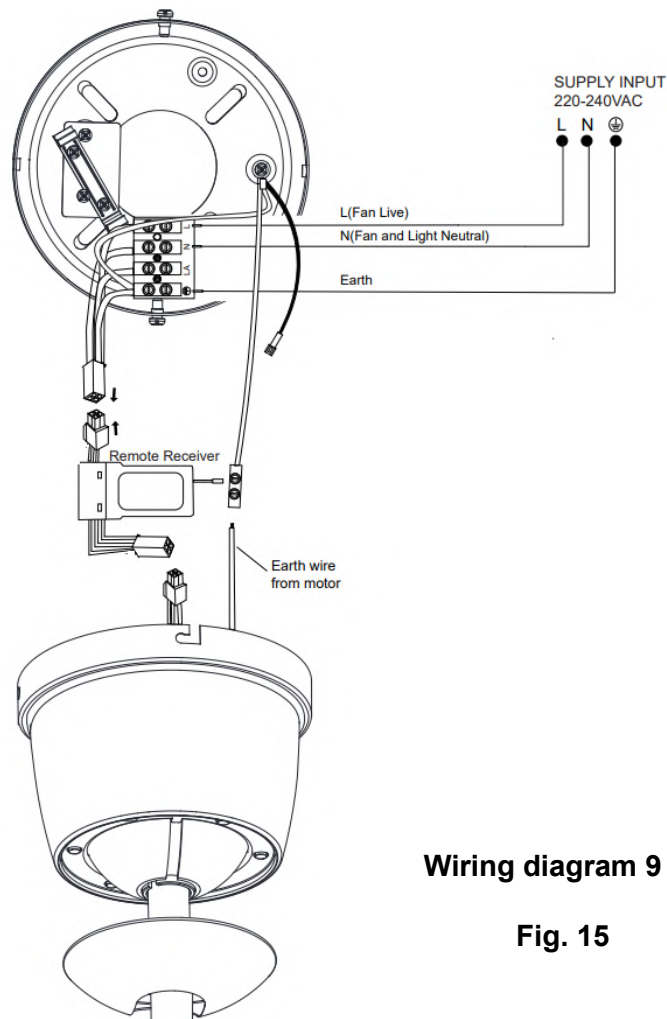

Wiring diagram 9

Fig. 15

- If your fan comes with a remote and receiver, carefully insert the receiver into the holder on the mounting bracket. Take care not to damage or loosen any of the wiring. (Fig.16)

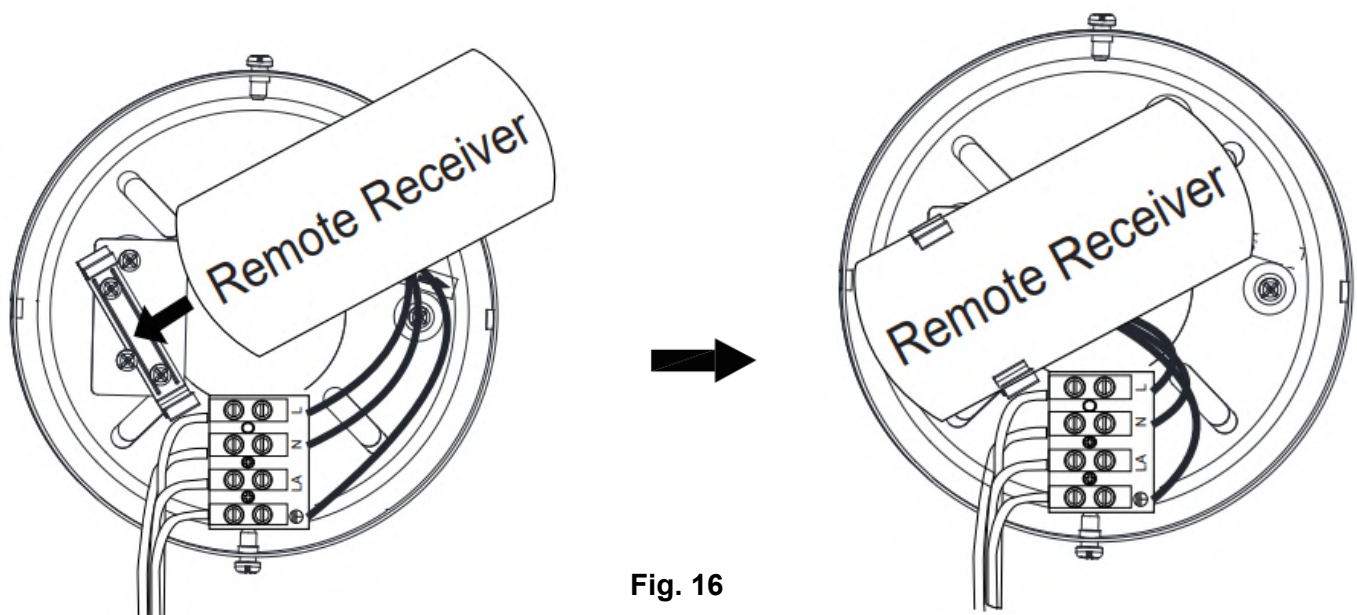


Fig. 16

INSTALL THE FAN ASSEMBLY TO THE MOUNTING BRACKET

- After completing the electrical connection at the mounting bracket terminal block, connect the ceiling fan wiring.

NOTE: Ensure the earth wiring is secure and correct by performing an earth continuity test from the fan's accessible metal body back to the earth terminal at the terminal block on the mounting bracket.

Install the fan assembly to the mounting bracket

- There are 2 screws pre-installed on the mounting bracket. Loosen the two canopy screws by half a turn from the mounting bracket. (For the L-shape slot on the angle canopy to be mounted).
- Remove the S-hook from the mounting bracket and fan assembly. (Fig.17)
- Lift the angle canopy of the fan assembly up to the mounting bracket and let the L-shape slot on the angle canopy go through the two canopy screws. (Fig.17)
- Turn the angle canopy until it locks in place at the end section of the L-shape slot. Secure it by tightening the two canopy screws. (Fig.18)
- Secure and tighten the two other canopy screws with a star washer to the mounting bracket. The angle canopy shall have 4 screws in total. Avoid damaging the electrical wiring prepared previously when hanging the canopy. (Fig.18)

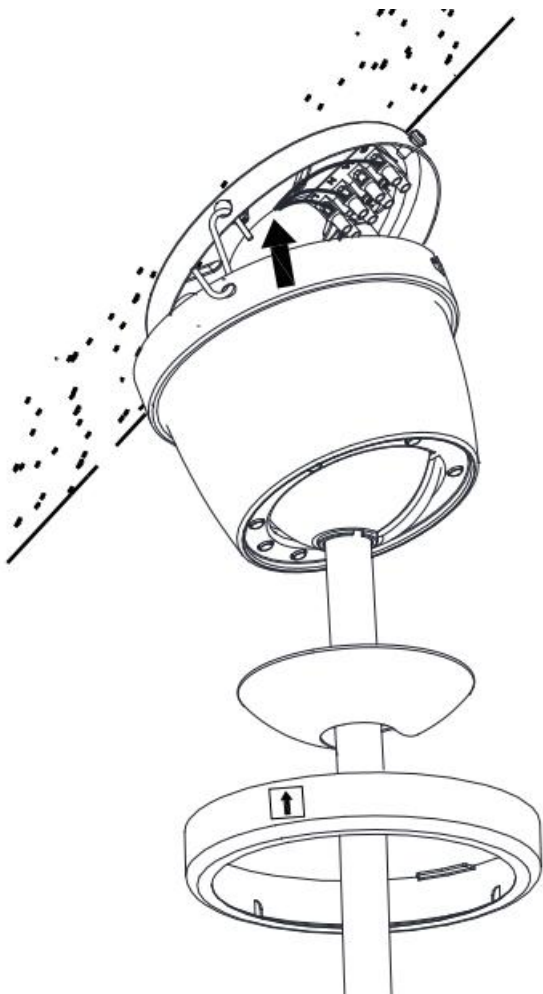


Fig. 17

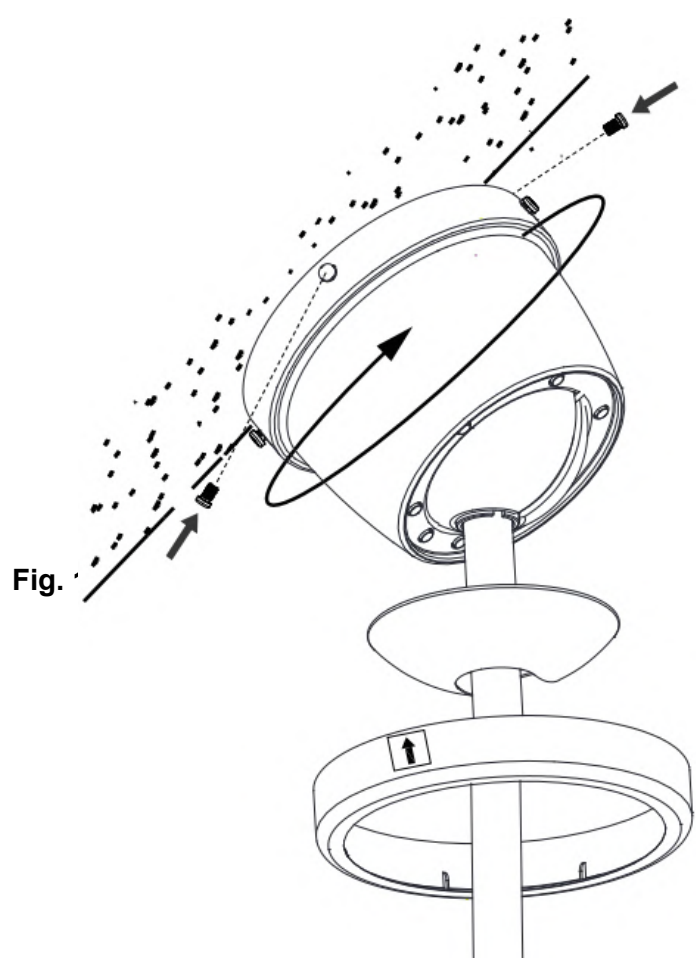


Fig. 18

- Slide the angle canopy cover to the angle canopy and attach it to the angle canopy. (Fig.19)
- Slide the decorative ring up to the angle canopy and attach it to the angle canopy. (Fig.19)

Note: When installing the decorative ring, do not align the arrow on the decorative ring with the screw on the angle canopy.

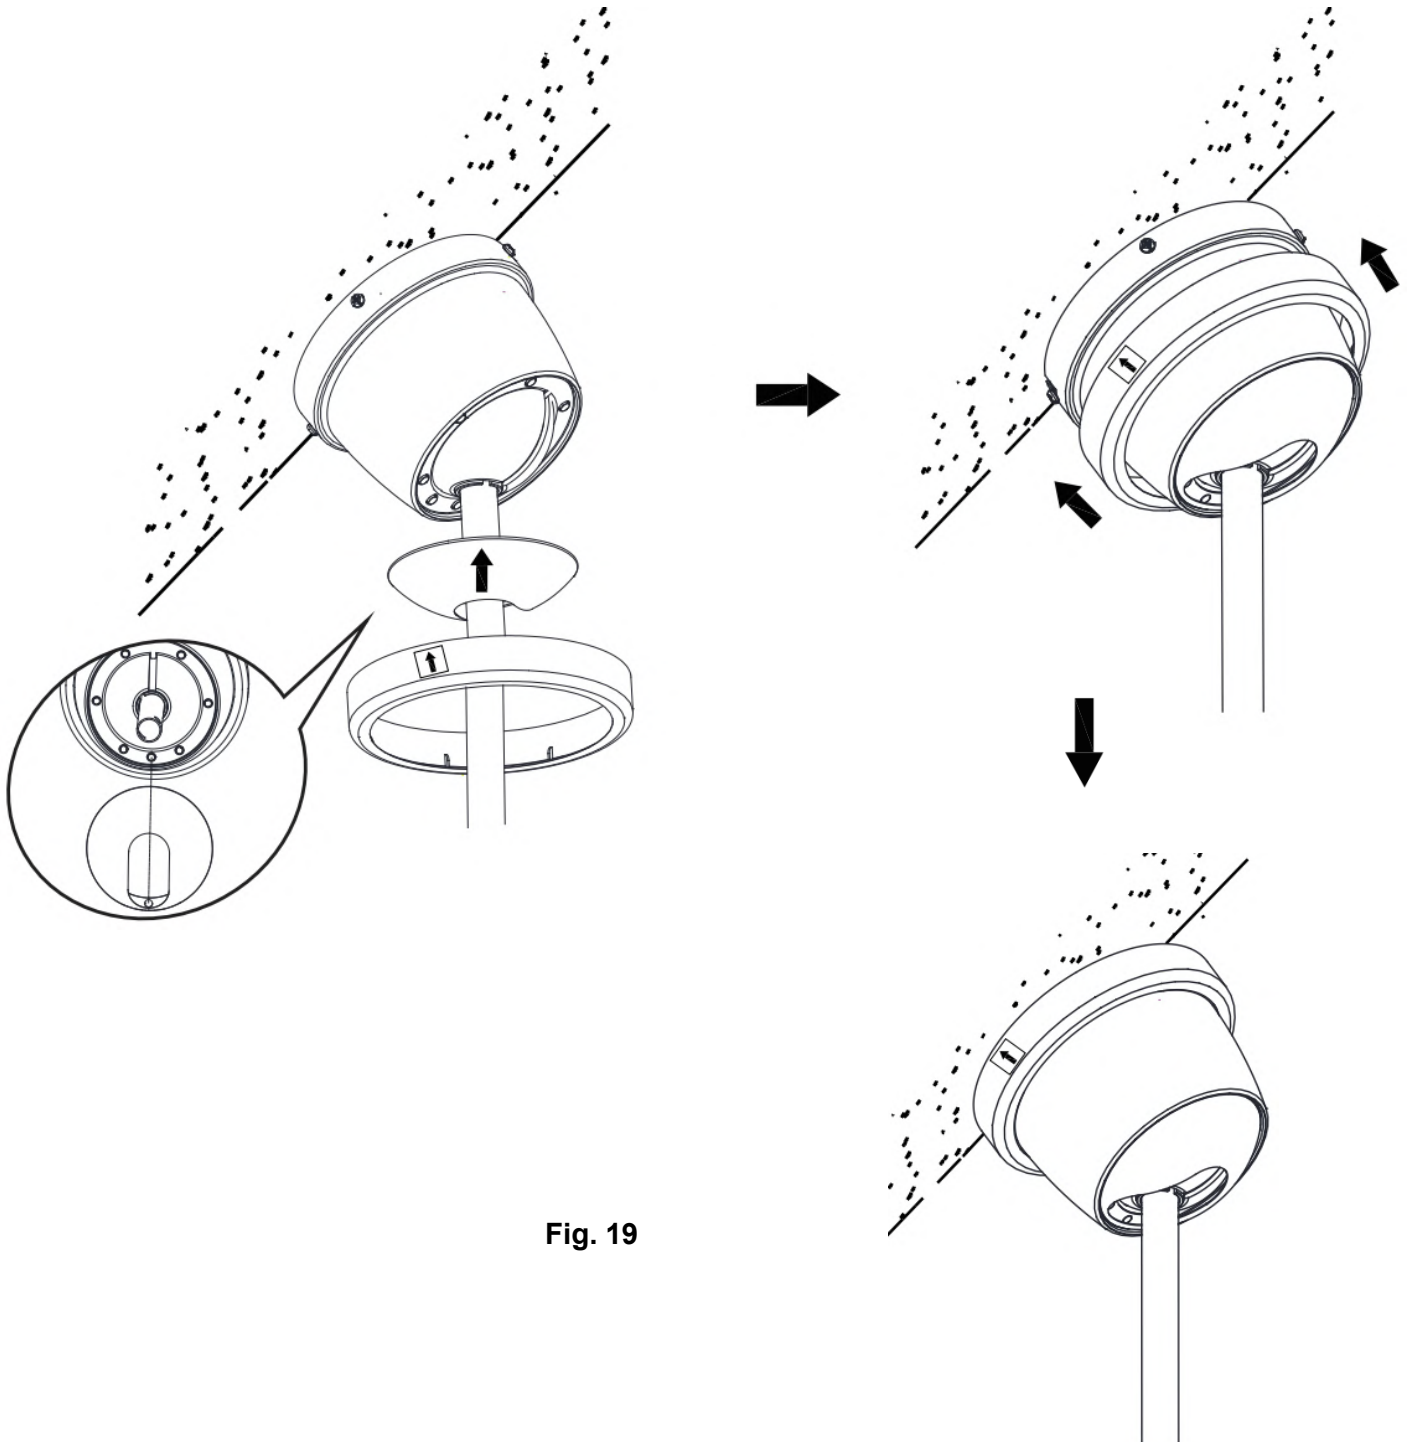


Fig. 19

CARE & CLEANING

NOTE: Always turn OFF the power at the mains switch before performing any maintenance or attempting to clean your fan.

Every 6 months, periodic cleaning of your ceiling fan is the only maintenance required. Refer the detail instruction manual of your fan.

NOTE: If it is necessary to remove the decorative ring in the future to disassemble and assemble this ceiling fan angle canopy, the following is a diagram showing how to remove the decorative ring. (Fig.20)



Fig. 20

- Pinch the decorative ring with your index finger and thumb (with the arrow positioned between the index finger and thumb). Use both hands to perform the same action, applying force simultaneously to deform the decorative ring, allowing the inner clamping positions to disengage from the angle canopy, and then remove the decorative ring.

TECHNICAL INFORMATION

Model Name	45 Degree Ceiling Fan Angle Canopy	
Models	SKU# 212840	SKU# 212841
Weight	0.84kg	
Weight Rating	25kg Max.	
Dimensions	H:125mm Dia:161mm	
Maximum Angle	45 Degrees	
Compatible Extension Down rod	Compatible with 21mm & 26.5mm diameter extension down rods (Not included, sold separately)	
Compatible Fans (Sold separately)	List of compatible fans is available on the product's web page, found on the Beacon Lighting Website: https://www.beaconlighting.com.au/	