


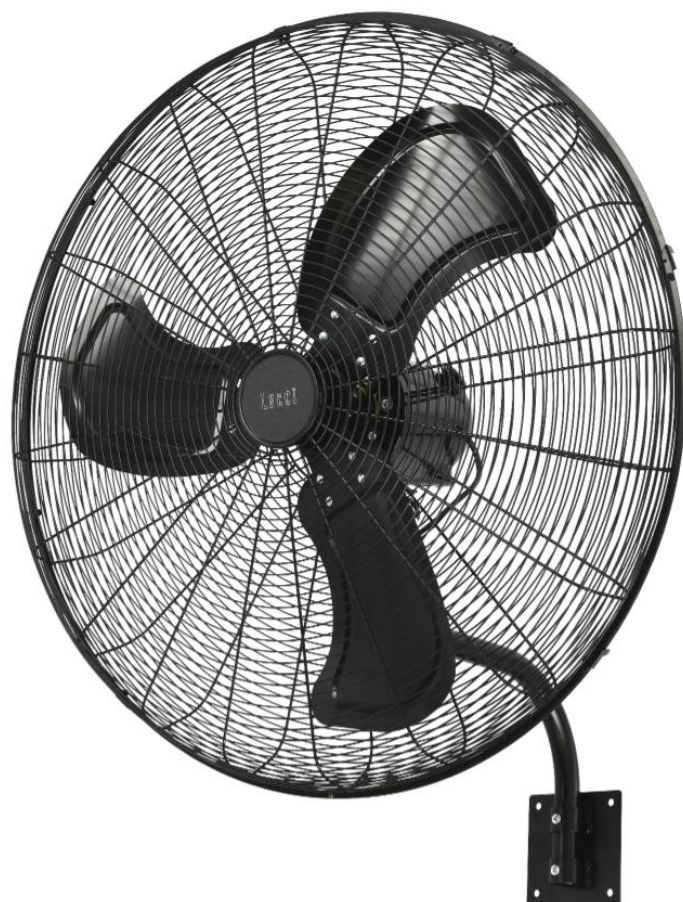

LUCCI AIR TURBINE WALL FAN

- **INSTALLATION**
- **OPERATION**
- **MAINTENANCE**
- **WARRANTY INFORMATION**

CAUTION
**READ INSTRUCTIONS CAREFULLY FOR SAFE
INSTALLATION AND FAN OPERATION.**

THANK YOU FOR PURCHASING

Thank you for purchasing this quality Lucci product. To ensure correct function and safety, please read and save all instructions before using the product.

SAFETY PRECAUTIONS

1. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
4. **WARNING: In order to prevent strangulation and shock hazard to children, the flexible wiring connected to this fan shall be effectively fixed to the wall.**
5. Ensure that the fan is switched off and unplugged from the mains socket outlet before removing the guard for cleaning.
6. Do not operate any product with a damaged cord or plug, after the product malfunctions, is dropped or appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.
7. Switch off and unplug from the mains socket outlet when not in use, before assembling or disassembling parts and before cleaning. Fully assemble the fan before switching on.
8. Avoid contact with moving parts. Do not insert any object through the grill when the fan is operating.
9. Do not cover the grill or operate in close proximity to curtains, etc.
10. The structure to which the fan is to be mounted must be capable of supporting a weight of 44kg.
11. This fan is suitable for indoor use only.



PARTS LIST

- Unpack your wall fan carefully. Remove all parts and hardware.
- Lay out all the components on a smooth surface and make sure there are no components missing before assembling. If parts are missing, return the complete product to the place of purchase for inspection or replacement.
- Check whether the wall fan has been damaged during transport. Do not operate/install any product that appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.
- Examine all parts, you should have the following:

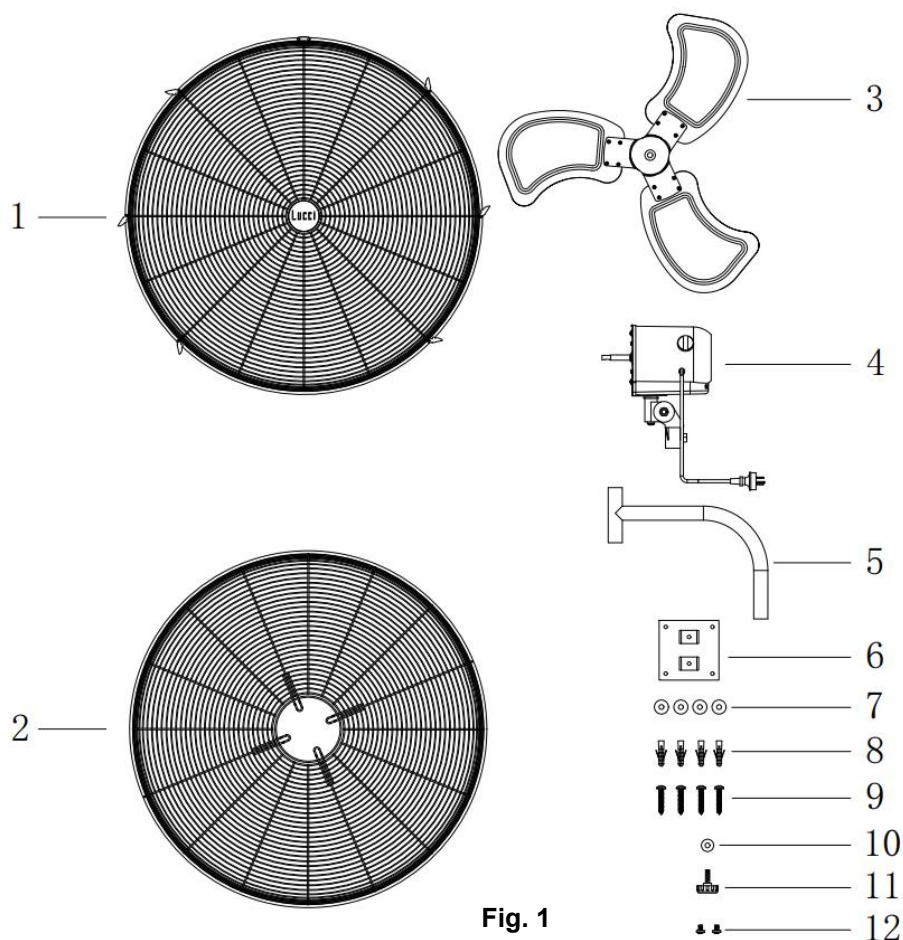


Fig. 1

1.	Front safety grill x 1	7.	Flat washer for mounting screw x 4
2.	Rear safety grill x 1	8.	Plastic anchor x 4
3.	Assembled fan blades x 1	9.	Mounting screw x 4
4.	Fan assembly x 1	10.	Flat washer for nut x 1
5.	Suspension arm x 1	11.	Nut x 1
6.	Mounting bracket x 1	12.	Screw x 2




INSTALLING THE FAN

1. Remove the rubber sleeve from the motor shaft of the fan assembly. (Fig.1)



Fig. 1

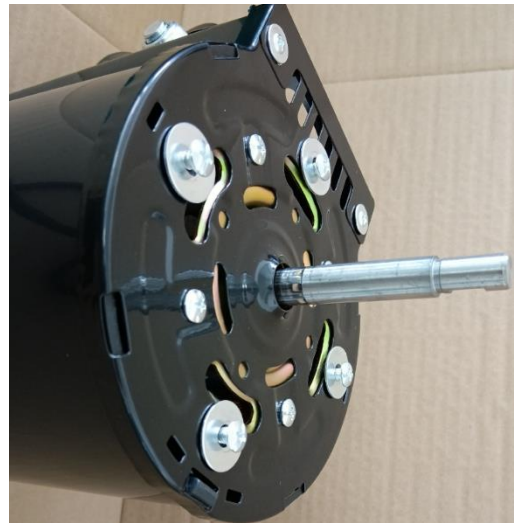

2. Remove the screws of rear safety grill from the fan assembly. (Fig.2)

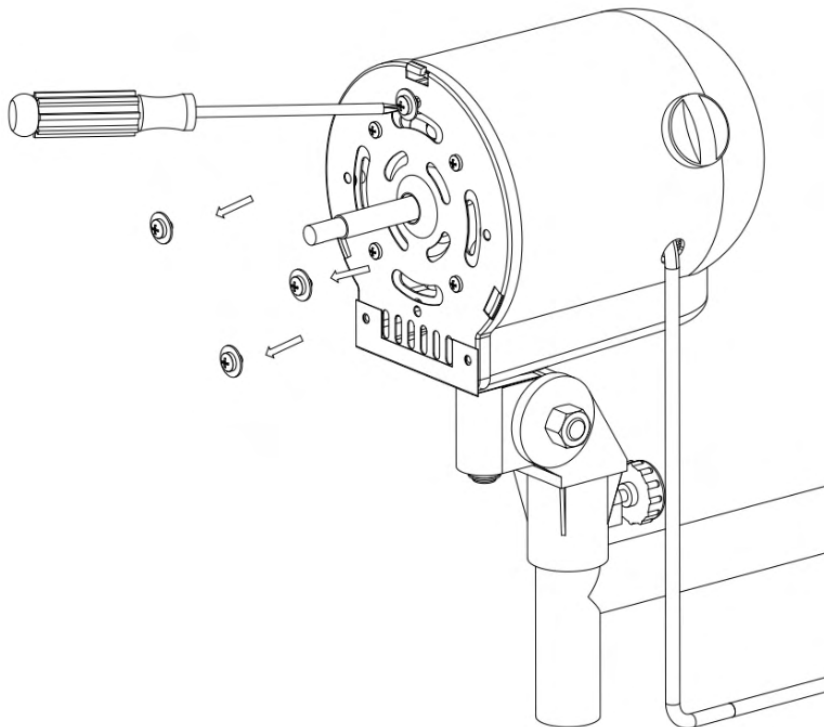


Fig. 2

3. Align the 4 mounting holes on the rear safety grill to the 4 mounting screw holes on the motor of fan assembly, and using the 4 screws in step 2, to secure the rear safety grill to the fan motor assembly. (Fig.3)

NOTE: Please ensure that the correct installation position of the small screw hole on the edge surface of the rear safety grille is facing the ground. (Fig.3)



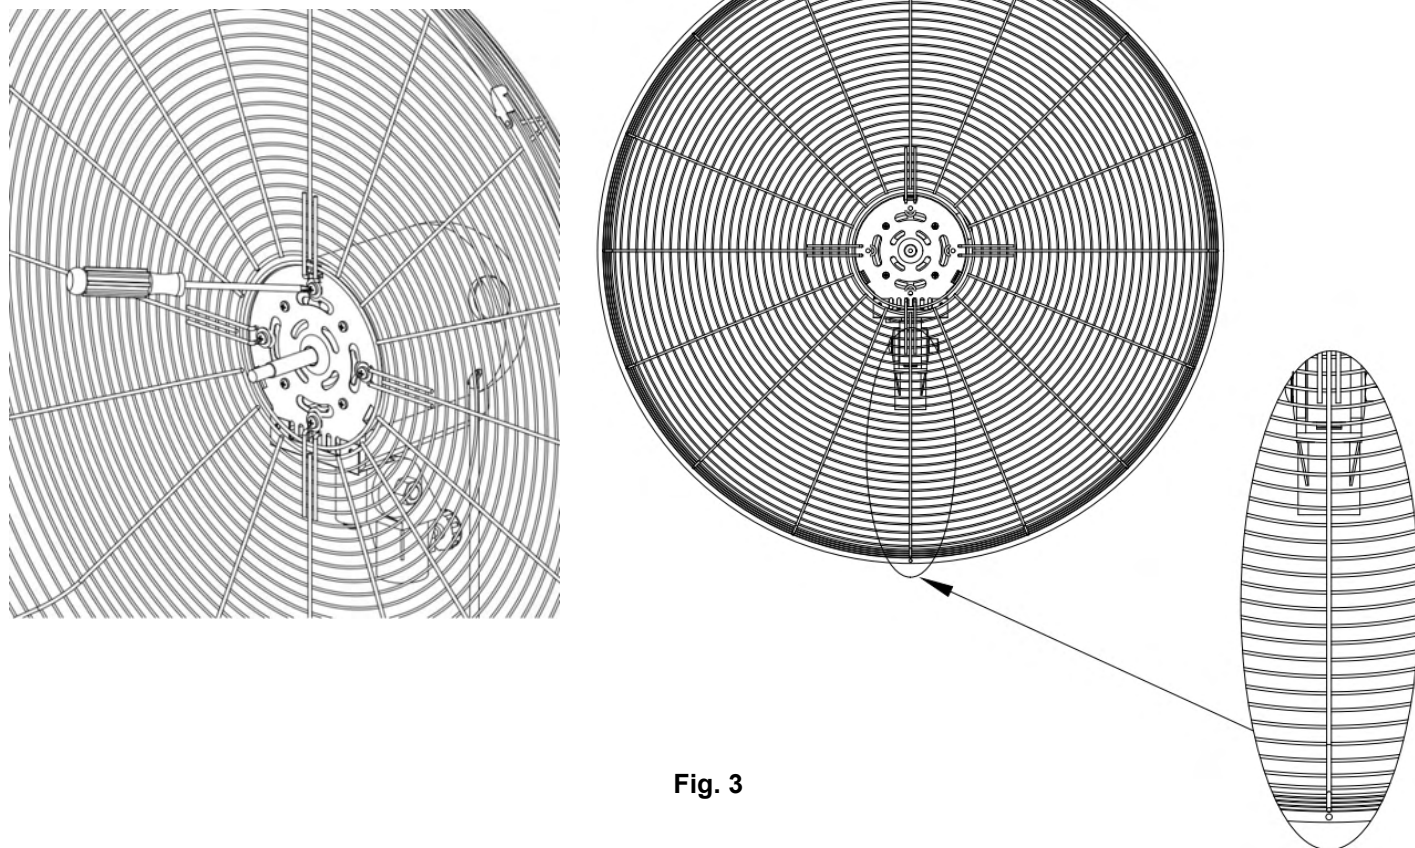


Fig. 3

4. Install the assembled fan-blades onto the motor shaft of the fan assembly, Tighten the screw on the side of the motor shaft. (Fig.4)

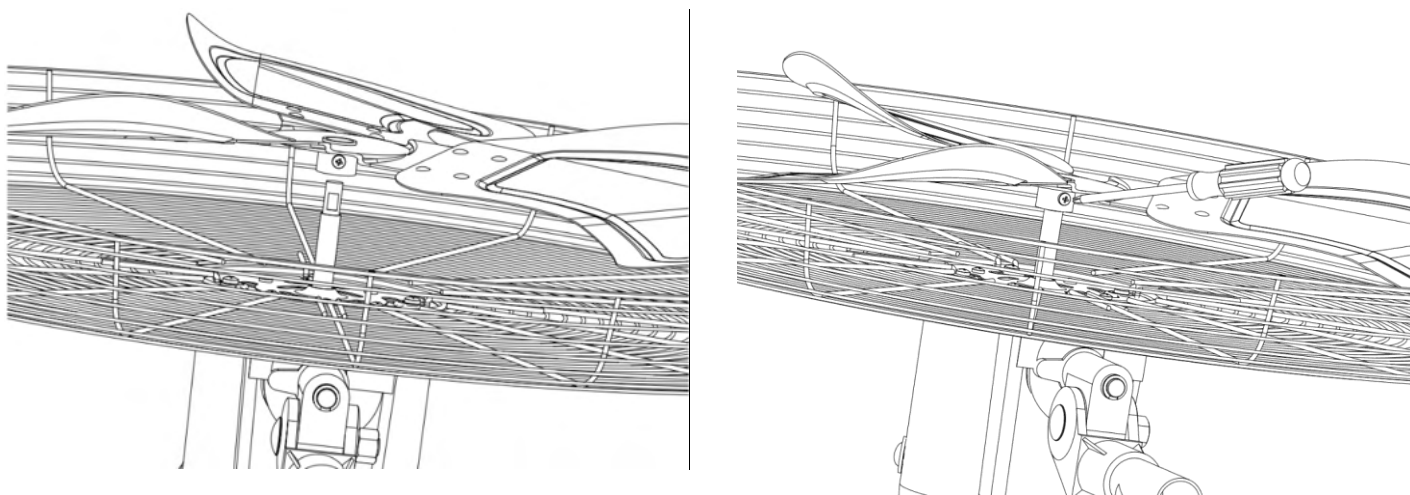


Fig. 4



5. Loosing the screw & nut on the edge of front safety grill. (Fig.5)

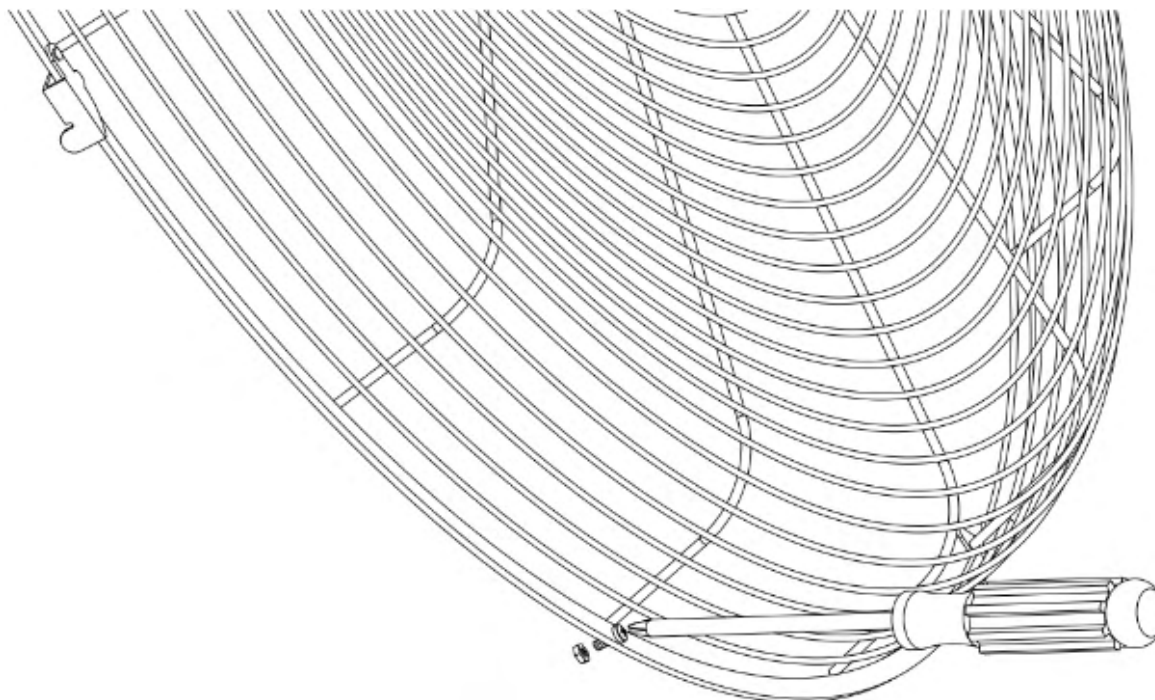


Fig. 5

6. Align the mounting hole on the edge of front safety grill to the mounting screw hole on the edge of rear safety grill, using the screw with nuts in step 5, to secure the front safety grill to the rear safety grill. (Fig.6)

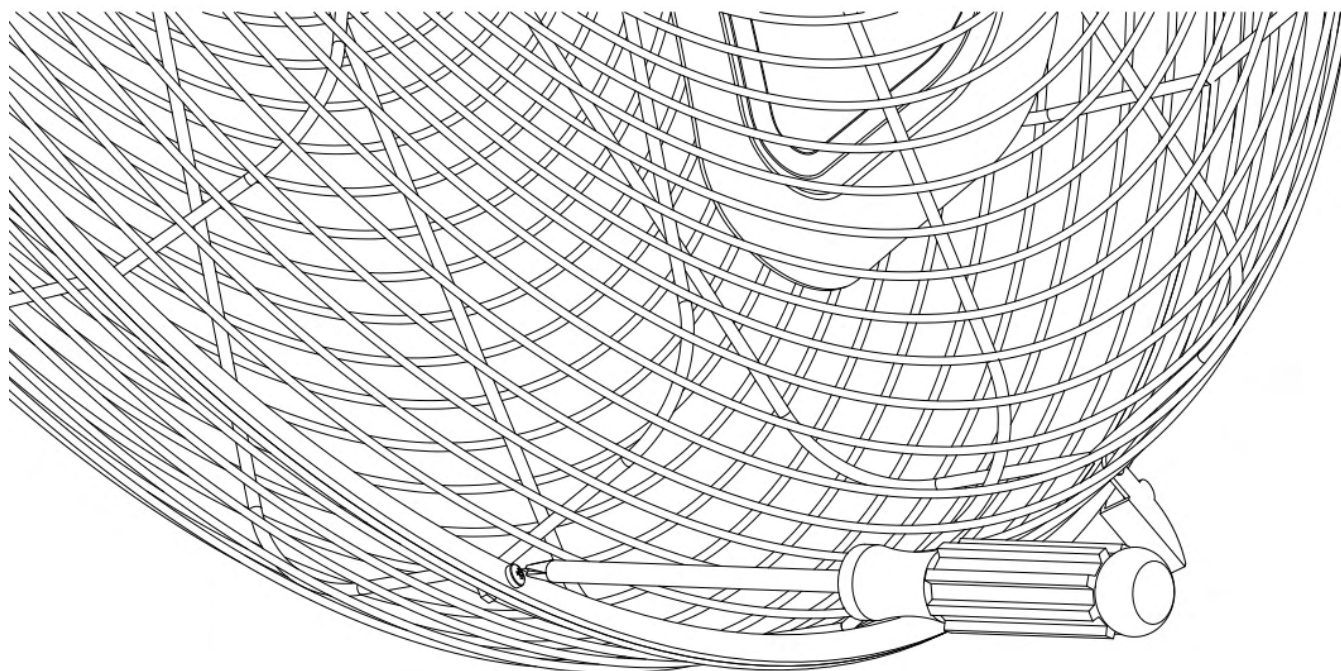


Fig. 6



7. Close the safety clips of the front grill and rear grill. (Fig. 7)

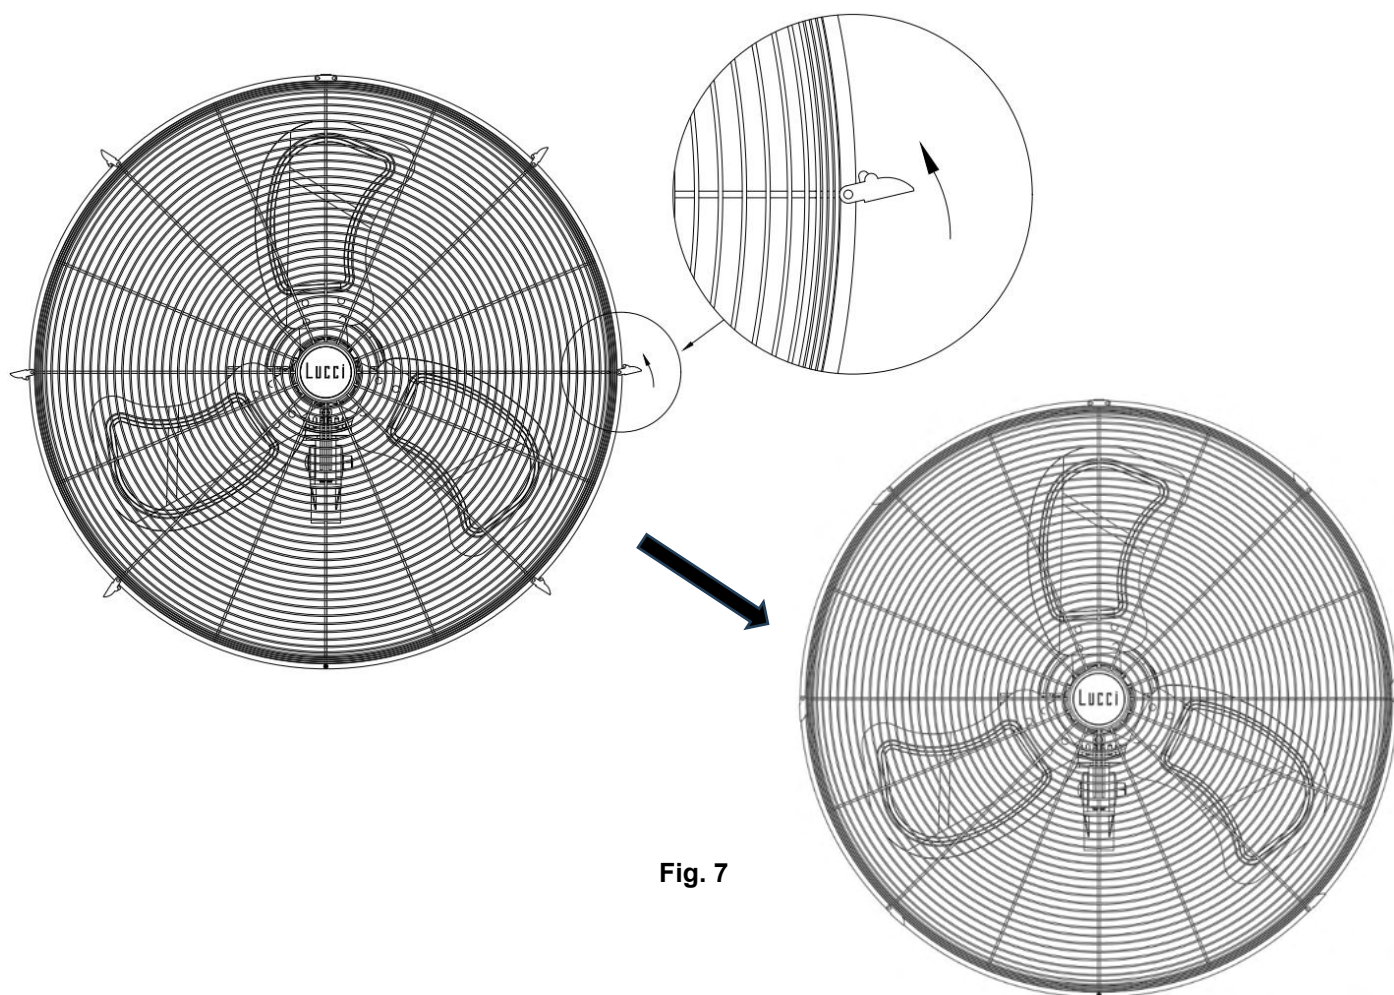


Fig. 7

8. Use mounting bracket as a template to mark the screw hole positions on the wall. (Fig.8)
9. Install the mounting bracket onto the wall by using appropriately sized mounting screws & washers and anchors. Ensure the screws and anchors used are suitable for the mounting surface and the surrounding environment. (Fig.8)


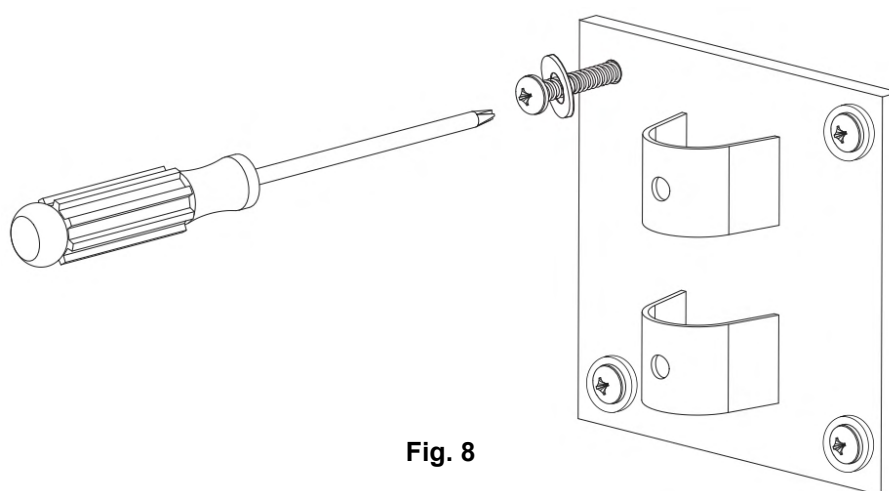



Fig. 8



10. Install the suspension arm onto the mounting bracket, and secure by tightening the two screws in the front. (Fig.9)

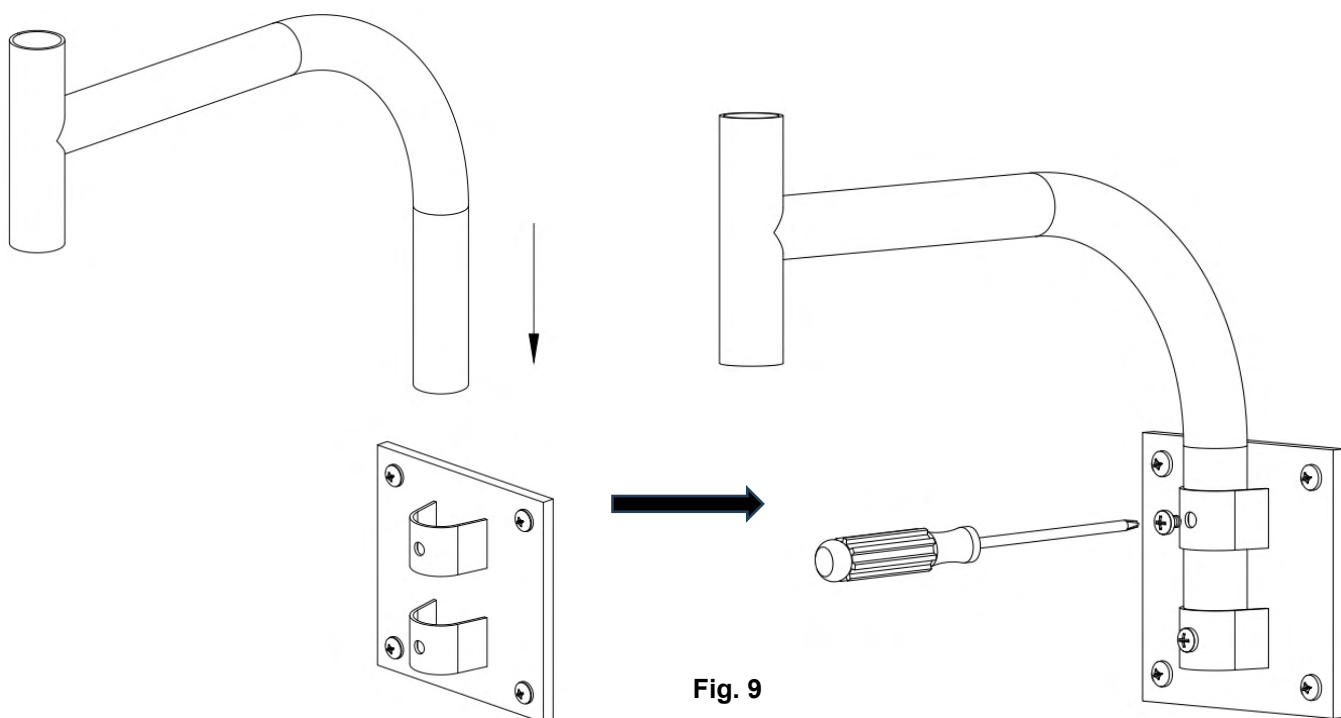

11. Install the fan assembly onto the suspension arm, and secure by tightening the nut and flat washer. (Fig.10)

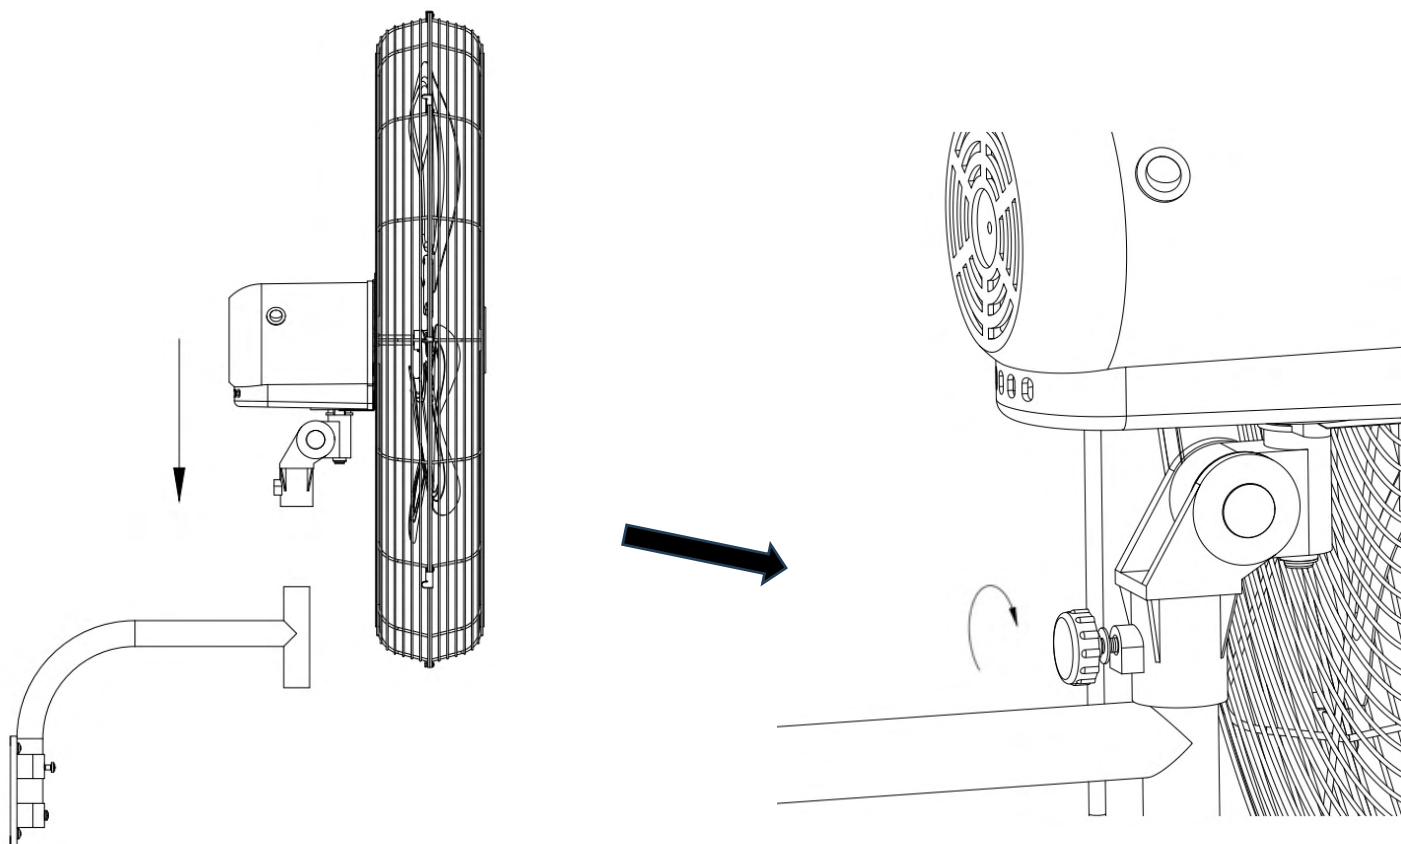

12. Insert the plug into the mains socket outlet and ensure it is fully plugged in. (Fig.11)

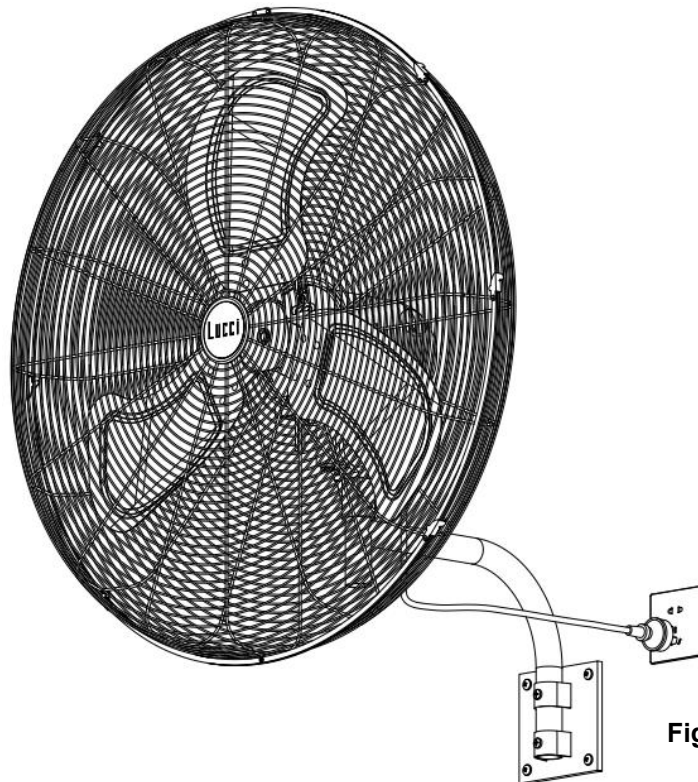


Fig. 11

USING YOUR FAN

FAN SPEED CONTROL (Fig.12)

The fan has 3 different speeds, which are controlled by the speed control switch.

- III - High speed
- II - Medium speed
- I - Low speed
- 0 - OFF

Fig. 12



FAN SWING CONTROL (Fig.13)

The oscillation of the fan is controlled by the Oscillation ON/OFF switch.

1. Turn on the oscillation ON/OFF switch, the fan will oscillate from left to right, then from right to left.
2. Turn off the oscillation ON/OFF switch, and the fan will stop oscillating.

Fig. 13



CARE AND CLEANING

NOTE: Always turn OFF the power and unplug from the mains socket outlet before performing any maintenance or attempting to clean your fan.

- Every 6 months periodic cleaning of your fan is the only maintenance required. Use a soft brush or lint free cloth to avoid scratching the paint finish. Please turn off electricity power when you do so.
- Do not soak or immerse your fan in the water or other liquids. It could damage the motor or the blades and create the possibility of an electrical shock.
- Ensure that the fan does not come in contact with any organic solvents or cleaners.
- In order to prevent strangulation and shock hazard to children, the flexible wiring connected to this fan shall be effectively fixed to the wall.
- To clean the fan blade, wipe with only a damp clean cloth with NO organic solvents or cleaners.
- The motor has a permanently lubricated ball bearing so there is no need to oil.

TECHNICAL INFORMATION

Fan	32" TURBINE wall fan		
Fan Models	SKU#213272		
Rated Voltage	100-240V~ 50Hz		
Rated Wattage	170W		
Weight	10.8kg		
Fan Dimensions	Dia:812mm	E:8400mm	H:890mm

